



ATM RESTART

The ATM Restart lets you remotely reboot your ATM from anywhere, saving you from lost transaction fees, unnecessary travel, and tech fees.



Data Harness



Power Harness

To install:

1. Connect the 15-Pin adapter of the data harness to the Hercules.
2. Join the 2-Pin connectors of the power harness to the data harness.
3. Plug the ATM's power cord into the black female end of the power harness and plug the male end into an outlet.

Note: Items plugged into the white outlet will not be power cycled during restart commands. If also using the ATM Protector, don't use the data harness. Use the 2-Pin connector of the ATM Protector's cable harness instead.

To restart your ATM:

1. Log in to the Hercules Portal at www.hercules.dplwireless.com and search for the Terminal ID of the ATM.
2. Click the Terminal from the list on the left to display its dashboard.
3. Scroll down to view the "Actions" section then click "Restart ATM".
4. Click "Yes" to restart the ATM now or schedule the action to be performed in the future.